



Part # 9700

03-07 classic pickups,
Tahoe, Suburban, and
Yukon Dash Accents

Instructions

Step 1

Remove dash bezel

Step 2

Use denatured alcohol to wipe all surfaces that will be covered with your new dash and door accents.

Step 3

Before peeling the adhesive back fit each piece, study how the part fits best.

Step 4

Peel adhesive back, set the left side in place, slowly set the rest of the part into place.


Step 5

Install bezel


If you have any questions about an installation please call our technical support team
(916)933-0236
We're here to help




Left panel

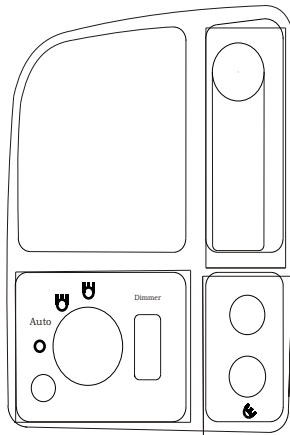

Dash center

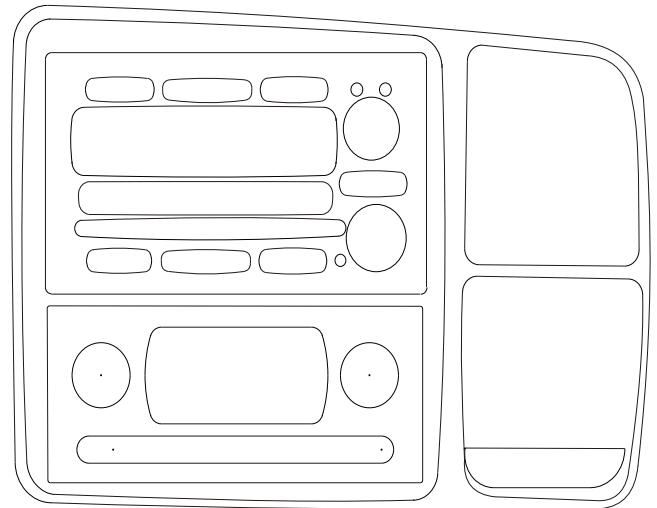

Left door

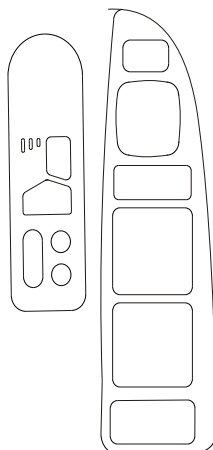

Right door

Consol

